



Guia para verificar a versão do software do DSLink 200

Rev.02

www.dslink.com.br

Guia para verificar a versão do software do DSLink 200


Esse guia visa auxiliá-lo no procedimento de verificação da versão de software do modem DSLink 200.

Para verificar a versão, siga as instruções abaixo:

1º Acesse a interface de configuração do modem:

Para acessar a interface de configuração do modem, abra seu navegador e na barra de endereços digite o seguinte:

- q **http://192.168.1.1**
(se o modem estiver conectado ao computador via **placa de rede ou no HUB**);
- q **http://192.168.1.2**
(se o modem estiver conectado ao computador via **USB**). Somente no modelo DSLink 200U/E.

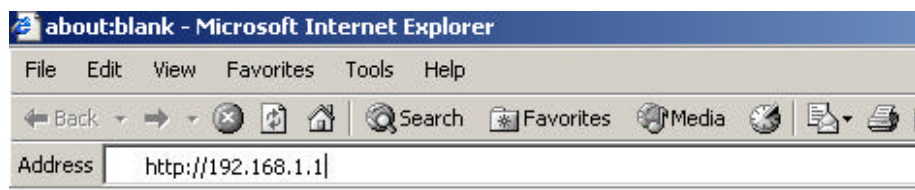

Tecla **Enter**, e a seguinte tela será apresentada:



Insira o nome de usuário **root** e a senha também **root**, em seguida clique **OK**.



Configurações do modem DSLink 200

2º Verifique a versão de software do DSLink 200 em System View no campo S/W Version:

System View			
Use this page to get the summary on the existing configuration of your device.			
Device		DSL	
Model:	Titanium	Operational Status:	Startup Handshake
H/W Version:	810012	Last State:	0x0
S/W Version:	VIK-1.37.020618ia	DSL Version:	T93.3.19
Serial Number:	123456789abcdx	Standard:	Multimode
Mode:	Routing And Bridging	Up	Down
Up Time:	0:3:9	Speed	Latency
Time:	Tue Jan 01 00:03:07 2003	0 Kbps	0 Kbps